

CALLER ID TRIM LINE

OWNER'S MANUAL AND OPERATING INSTRUCTIONS



FEATURES:

- 50 MESSAGE MEMORIES
- 3-LINE INDICATION
- ENGLISH/SPANISH/FRENCH SELECTABLE
- NAME AND NUMBER DISPLAY
- REDIAL THE DISPLAYED NUMBER
- DATE AND TIME STAMP
- TIMER

- RECEIVER VOLUME CONTROL
- LCD CONTRAST ADJUSTABLE
- REAL TIME CLOCK
- REVIEW MESSAGE
- MESSAGE DELETION
- LOW BATTERY INDICATOR
- POWER: 4 X AAA BATTERY (NOT INCLUDED)

TELEPHONE OPERATION

FEATURES OF TELEPHONE SECTION

- Tone/Pulse Switchable
- Mute and Flash buttons
- Fully Modular Jacks
- Ringer On/Off Switch
- Hearing Aid Compatible
- Receiver Volume Control Switch

OPERATION

A. RECEIVING A CALL

Whenever the phone rings, pick it up and use it as you would with a standard telephone.

B. MAKING A PHONE CALL

Pick up the handset and listen for a dial tone. Enter the phone number you wish to dial on the key pad.

C. ENDING A CALL

When you finish your conversation, return the handset to the cradle, or press the Hook Switch button.

D. RINGER HI/LO/OFF SWITCH

When you don't want to be disturbed by incoming calls, slide the Ringer Switch to the 'OFF' position. You can still use the phone to make outgoing calls, but any incoming call will not activate the ringer.

E. REDIAL BUTTON

When the handset is lifted from the cradle and the 'REDIAL' key is depressed, the last number entered will automatically redial again.

F. MUTE OPERATION

During your phone call, if you want a private conversation not to be heard by the other party on the line-

- Press and hold the MUTE button.
- To continue your phone call, release the MUTE button.

G. FLASH BUTTON

- If the dialing number is busy or the conversation is completed, Press the 'FLASH' button to discount the line.
- Release for a new dial tone.

H. RECEIVER VOLUME CONTROL SWITCH (HIGH/MEDIUM/LOW)

The sound level of receiver can be justify by switch knob.

Remarks

- When your phone is not in use, make sure it rests properly on the telephone base.
- Avoid rough handling and areas with high humidity, heavy dust and extreme temperature.
- When the phone needs cleaning, use a mild detergent and a damp cloth, never use abrasive, strong cleaners or Solvents.

FEATURES OF CALLER ID SECTION

- 3 Language Selection - Information can be displayed in either English, Spanish, or French.
- 3-line LCD Screen -Shows caller's name and number
- Date / Time Stamp - Records the date and time of each call
- 50 Call Memory - stores up to 50 calls received
- Call Review - scroll up or down to review all calls
- Call Delete - erase individual or all calls from memory
- Real Time Clock
- Low Battery Indicator - Indicates when battery power is low
- Power - Operates on AAA x 4 Batteries

IMPORTANT NOTES:

To operate this unit, you must have caller ID service set-up with your local telephone company. Some functions such as "caller name indication" and "message waiting indication" will only operate if such services are included in the user's caller I.D. program with the local telephone company.

SETUP

In order to operate this Caller ID unit, you must set up the unit and preset information as follows:

1. INSTALL AAA x 4 Batteries
2. Using the telephone line cord included with the Phone, connect one end into your telephone's line jack and the other end into the wall jack
3. Select Language:

ENG ESP FRA

- a) Press [DEL] and [DOWN] at the same time and hold for 10 seconds to initialize the pre-setting program. "Enter Language" then "ENG, ESP, FRA" should appear on the screen.
- b) Press [UP] or [DOWN] to-select the desired language mode.

4. Enter your area code (Area Code Preset):

000
ENTER AREA CODE

- a) Press [UP] or [DOWN] to select the first digit of the area code.
- b) Press the [DEL] button once to set the first digit.
- c) Repeat steps a) and b) to select the remaining digits.

5. Enter time and date.

00:00 PM 1/01
ENTER TIME DATE

- a) Press [UP] or [DOWN] to select the correct hour
- b) Press [DEL] to set.
- c) Repeat steps a) and b) to select the correct minute, AM/PM, month, and day

6. Adjust the LCD contrast

- a) Press [DEL] and [UP] at the same time until "LCD CONTRAST" appear on screen.
- b) Press [UP] or [DOWN] to adjust the contrast of the LCD.

LCD CONTRAST

CALLER ID STATUS INDICATIONS

The following words might appear on the LCD screen

- "UNAVAILABLE" - The Caller was using a telephone with an unlisted number, or through a telephone company that does not offer Caller ID service. The [DIAL] button cannot redial this number.
- "PRIVATE" - The Caller has blocked caller ID service. For privacy reasons, many states allow callers the option to prevent his or her telephone data from being displayed on the other party's caller ID display. The [DIAL] button cannot redial this number.
- "LINE ERROR" - There was an error with the data received due to a possible line or telephone problem.
- "CALLS NEW" - Indicates the number of total calls received and number of new calls received.

CALL REVIEW - Viewing the Caller ID List

- You must wait 2 or more rings to receive Caller ID data.
- This unit can store up to 50 calls received.
- The default display will show the present time, date, total number of calls and total number of new calls received that have not been reviewed yet.

12:24 PM 1/01
10 CALL 2 NEW

- Press [UP] or [DOWN] to display and search through the memory. The most recent call received will appear first. "END OF RCV" will appear on the screen to indicate the end of numbers stored in memory
- If the call received is in your area code, the area code number will not appear on the screen.

CALL DELETE - Erasing Data From the Caller ID List

- If there are 50 calls already stored in memory, a new call received will cause the oldest number in memory to be automatically erased from memory.

TO ERASE THE INDIVIDUAL PHONE NUMBER FROM MEMORY
- PRESS [DEL] ONCE ("DEL CALL?" APPEAR ON THE SCREEN)
- PRESS [DEL] AGAIN TO ERASE THE PHONE NUMBER

TO ERASE ALL PHONE NUMBERS FROM MEMORY
- PRESS [DEL] BUTTON AND HOLD FOR 3 SECONDS
- "DEL ALL CALLS?" APPEAR ON THE SCREEN
- PRESS [DEL] BUTTON UNTIL "NO CALL" APPEAR ON THE SCREEN

NOTE: IF THERE IS A NEW CALL ALREADY STORED IN THE MEMORY, "NEW CALL PROTECT" WILL APPEAR ON THE SCREEN TO INDICATE NEW CALL RECEIVED THAT HAVE NOT BEEN REVIEW.

ONE-TOUCH DISPLAYED NUMBER DIALING-Calling

a Number From the Caller ID List


- Press [UP] or [DOWN] to display the desired number
- Pick up your telephone handset
- Press the [DIAL] button on the Caller ID to automatically dial the number displayed.

VOICE MESSAGE INDICATOR

- An envelope icon with the "MSG" string indicates voice mail was received in your voice mail service (if available). Contact your telephone company to obtain voice-mail service.

LOW BATTERY INDICATOR

- When a battery icon appears on the display screen, it indicates that battery power is low and needs to be replaced immediately. This icon will disappear once new batteries are installed.

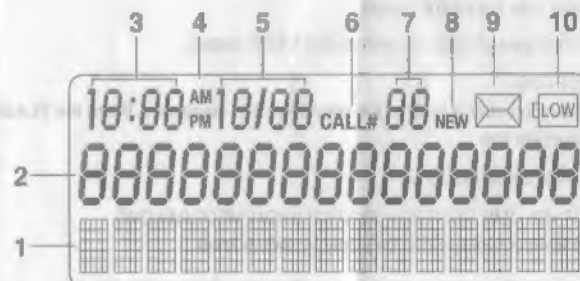

- 1. Name
- 2. Number
- 3. Clock
- 4. Am/Pm
- 5. Date
- 6. In Coming Call
- 7. Call In Numbers
- 8. New Calls
- 9. Message
- 10. Battery Low

5. Enter time and date.

00:00 PM 1/01
ENTER TIME DATE

- a) Press [UP] or [DOWN] to select the correct hour
- b) Press [DEL] to set.
- c) Repeat steps a) and b) to select the correct minute, AM/PM, month, and day.

6. Adjust the LCD contrast

- a) Press [DEL] and [UP] at the same time until "LCD CONTRAST" appear on screen.
- b) Press [UP] or [DOWN] to adjust the contrast of the LCD.

LCD CONTRAST

CALLER ID STATUS INDICATIONS

The following words might appear on the LCD screen

- "UNAVAILABLE" - The Caller was using a telephone with an unlisted number, or through a telephone company that does not offer Caller ID service. The [DIAL] button cannot redial this number.
- "PRIVATE" - The Caller has blocked caller ID service. For privacy reasons, many states allow callers the option to prevent his or her telephone data from being displayed on the other party's caller ID display. The [DIAL] button cannot redial this number.
- "LINE ERROR" - There was an error with the data received due to a possible line or telephone problem.
- "CALLS NEW" - Indicates the number Of total calls received and number of new calls received.

CALL REVIEW - Viewing the Caller ID List

- You must wait 2 or more rings to receive Caller ID data.
- This unit can store up to 50 calls received.
- The default display will show the present time, date, total number of calls and total number of new calls received that have not been reviewed yet.

12:24 PM 1/01
10 CALL 2 NEW

- Press [UP] or [DOWN] to display and search through the memory. The most recent call received will appear first. "END OF RCV" will appear on the screen to indicate the end of numbers stored in memory
- If the call received is in your area code, the area code number will not appear on the screen.